

EQUIPMENT SETUP GUIDE

Read and follow the BUNN ULTRA Installation & Operating Guide included with your kit.
This Equipment Setup Guide is not intended to replace any manufacturer's process or procedure.

- Unbox Bunn Ultra2 and place on counter top.
 - Ensure 6" of space around machine for ventilation.
 - Plug into dedicated 110v circuit.
 - Do not use an extension cord.

(See "Initial Setup" of the BUNN Installation & Operating Guide)



- Rinse and sanitize hoppers and hopper components prior to filling with product.

(See Steps 11 - 13 of the "Disassembly & Cleaning" section of the "USE & CARE INSTRUCTIONS FOR ULTRA 1 & 2 COLD DRINK DISPENSER")




Follow the provided "ASSEMBLY" section of the "USE & CARE INSTRUCTIONS FOR ULTRA 1 & 2 COLD DRINK DISPENSER" to complete the dispenser installation.

- Add 5 parts water 1 one part concentrate to mixing jug.
Shake and pour into Hopper (s).



- Power on Bunn Ultra. Press Auger button to activate auger. Press temperature button and set to "ICE"

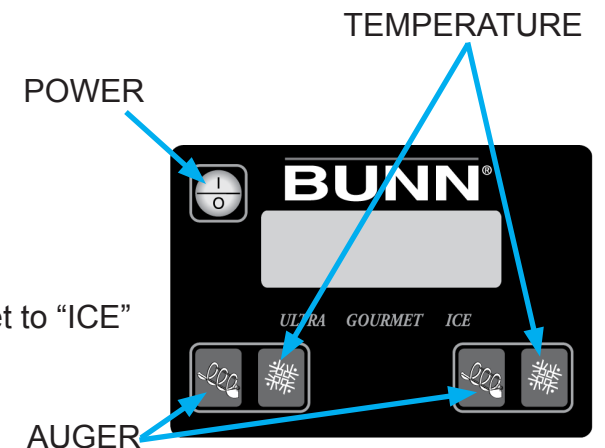

SIGNAGE SETUP GUIDE

- 1** Install the SLUSH PUPPIE graphic to the BUNN ULTRA.
Click the image to watch the instructional video.
(Your BUNN ULTRA may already have the SLUSH PUPPIE decal applied.)



- 2** Hang the SLUSH PUPPIE Mobile above the dispenser using the provide C-Clips.



- 3**
- Apply pricing to the Pricing Easel.
(We recommend: \$1.19 12oz, \$1.59 16oz and \$1.99 24oz)
 - Attach Pricing Easel to Cup Dispenser with 2 sided clip.



- 4** Apply 2 sided Window Sign to window and Pole Cup Sign to outside pole using zip ties to advertise your SLUSH PUPPIE program and encourage customer impulse purchases.
(Pole Cup Sign may not be included in some kits.)



Window Decal



Pole Cup Sign

When complete, your SLUSH PUPPIE program should include:

- Hanging Mobile Sign
- Cup Dispenser
- Pricing Sign
- Beverage Dispenser Decal

 


For more help, click or go to:
<http://slushpuppie.com/store/kit-setup/>

CUSTOMER SERVICE: 1-800-423-3872

The ICEE Company, Ontario, CA 91761

BASIC OPERATIONS and SETTINGS

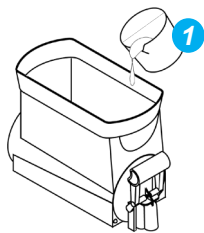

1

Pour pre-mixed product into hopper and install lids.

2

Press the ON / OFF button to power unit on.




3

Press the AUGER button to activate the auger.

4

Press and release the TEMPERATURE button to cycle through options and set to "ICE".


DATE AND TIME:

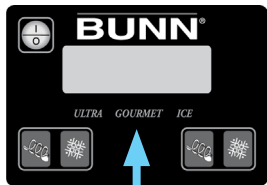

Press and hold the GOURMET button for 5 secs. When the screen reads : "Cleaning Guide?" Press and release the gourmet button to advance through screens until you reach "SET DATE TIME?"



Press ICE (YES) to set the date and time.

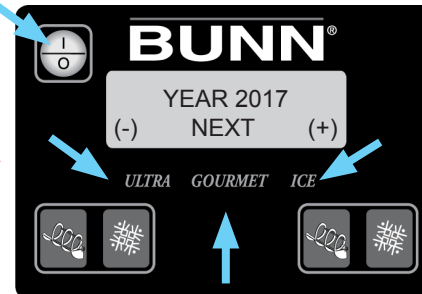


Press ULTRA (-) to decrease the current YEAR value. Press ICE (+) to increase the current YEAR value. Press GOURMET (NEXT) to move forward to MONTH, DAY, HOUR, MINUTE and SECOND screens. Press the I/O button (BACK) to move to the previous screen if needed.

NIGHT AND DAY TIME:

The setting of the Day/Night mode allows the dispenser to "power down" during off hours. The bottom corners displaying "ICE" will change to "CHILL" during the night mode. During night mode, the product will be kept chilled below 35°F. "ICE" reading will return after night mode elapses. With "OFF" representing 12:00 AM, the operator can scroll to the times desired for the night time mode to begin and end.




Press and hold the GOURMET button for 5 secs. When the screen reads : "Cleaning Guide?" Press and release the gourmet button to advance through screens until you reach "SET NIGHT TIME"

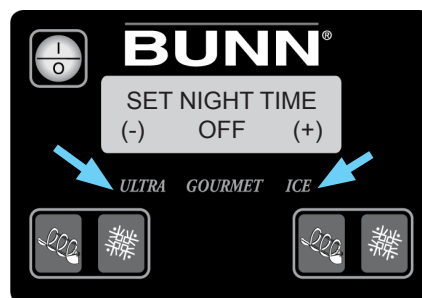

Press the Ultra button to decrease the current value.

Press the ICE button to increase the current value.

Press the GOURMET button to proceed to the next screen.

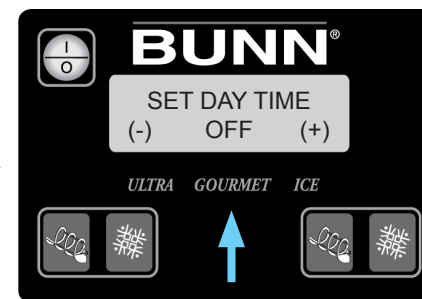

Use the GOURMET button to move to the NEXT screen.

CUSTOMER SERVICE: 1-800-423-3872

The ICEE Company, Ontario, CA 91761

For more help, click or go to:
<http://slushpuppie.com/store/maintenance/>

CLEANING

This guide is for quick reference only and is not intended to replace the information in the Operation Manual or Local Health Regulations!
TURN COOLING TO OFF SELECTION. EMPTY ALL PRODUCT FROM HOPPER(S). TURN AUGER TO OFF SELECTION.



1 Unplug the hopper lamp cord(s) and remove the hopper lid(s).



2 Depress the hopper lock plunger, lift slightly.



3 Pull the hopper assembly forward and remove.



4 Pull the auger from the cooling drum.



5 Remove the hopper seal from the flange on the cooling drum.



6 CAUTION: Faucet valve is under spring tension. Spread one side of the handle first, then the other and disconnect from hopper.



7 Carefully slide valve up to remove spring and faucet seal. Extra care should be taken when handling the seal to prevent damage.



8 Remove the auger nose bushing from inside the front of the hopper. NOTE: Do not scratch this surface when cleaning. Deep scratches could cause leakage around the seal.



9 Remove the drip tray and cover.

10 Place all parts in a clean sink with mild hot water (120°F) and sanitizer solution. Allow all parts to soak for at least 5 minutes. Carefully wash all components with a clean wash cloth in the hot water and sanitizer solution. Use a clean, soft bristle brush as needed for the smaller components and tight areas. Do not immerse hopper lids. Use a commercial sanitizer that has 100 ppm of available chlorine with a concentration level of at least 3% available chlorine (KAY-5 Sanitizer). Follow the sanitizer's mixing instructions to ensure 100 ppm of available chlorine.

11 Wash the drum(s), hopper drip tray(s), top cover(s), and outer enclosure using a clean wash cloth that has been dampened in the hot water and sanitizer solution. Pay particular attention to the shaft area and make sure it is thoroughly cleaned and sanitized.

12 Thoroughly rinse all surfaces with a clean wash cloth that has been dampened with hot water. Wipe dry with a clean dry wash cloth before reassembling the dispenser.

NOTE – Although most parts are dishwasher safe, they may be affected by the chemicals in some commercial sanitizing agents. Do not place the hopper nor hopper lids in a dishwasher. Rinse thoroughly before assembly.

ASSEMBLY**1**

Replace the auger nose bushing inside the front of the hopper.

**2**

Install the hopper seal over the flange at the rear of the cooling drum as shown.

**3**

Align the auger shafts with the augers. Push the augers as far as they will go and rotate them so the flat face of the auger shaft is aligned with the flat face of the auger nose.

**4**

Install the hopper over the auger and cooling drum and slide it into place. Push down until the hopper lock plunger snaps into place.

5

Set the hopper lid on the hopper with lamp cord at the back.

**6**

Plug in the hopper lid lamp cord.

**7**

Position the faucet seal and the return spring in the faucet valve.

**8**

Slide the faucet valve assembly into place on the hopper.

9

Press down on the valve to compress the spring. Position the faucet handle over the faucet valve one side at a time and snap into place on the hopper.

10

Install the drip tray and cover.

11

Turn ON augers and cooling function to desired settings.

12

All product must be thoroughly mixed BEFORE adding it to the hoppers.

CUSTOMER SERVICE: 1-800-423-3872

The ICEE Company, Ontario, CA 91761

For more help, click or go to:

<http://slushpuppie.com/store/maintenance/>

TROUBLE SHOOTING GUIDE

Before you call for service...

PROBLEM	REASON	SOLUTION	NOTES
Lid lights flash on and off	Beverage levels low	Refill beverage hopper with premixed product	
Product not freezing	Ambient temperature too high	Be sure there is a minimum of 6 inches of air space at the top, back and sides of the dispenser.	Maximum ambient temperatures not to exceed 90 degrees
	Temperature setting set to "Off" or "Chill"	Set temperature setting to "ICE"	
	Consistency set too low	Set the Consistency setting to a higher value. See SETTINGS portion of this guide.	Default value is 10 Possible range (01 - 16)
	Insufficient power to compressor	Be sure the power receptacle is properly rated for your dispenser.	
	Dirty Filter	<ol style="list-style-type: none"> 1. Remove filter from back of unit. 2. Soak filter in hot soapy water. 3. Rinse, Dry and Replace filter. 	
Faucet Leakage	Faucet seal misaligned or damaged or misaligned	<ul style="list-style-type: none"> • Follow the recommended cleaning guide to remove and inspect the faucet seal. • If the faucet seal was misaligned, realign the seal, reassemble and recheck for leaks. • If damaged - call for service. 	DO NOT LUBRICATE the faucet seal
Product leaking below the hopper	Rear drum seal misaligned or damaged.	<ul style="list-style-type: none"> • Follow the recommended cleaning guide to remove and inspect the rear drum seal. • If the drum seal was misaligned, realign the seal, reassemble and recheck for leaks. • If damaged - call for service. 	The tapered end of the seal must face to the front of the dispenser
DISPLAY MESSAGE: <i>"FILTER CLEANING REQUIRED"</i>	Preventive Maintenance Reminder	<ol style="list-style-type: none"> 1. Remove filter from back of unit. 2. Soak filter in hot soapy water. 3. Rinse, Dry and Replace filter. 4. Hold ULTRA button for 3 seconds to reset message 	
	Dirty Filter		
	Insufficient air flow		
DISPLAY MESSAGE: * SENSOR ERROR	VARIOUS	All display messages containing: "SENSOR ERROR" require a call for service.	All sensor errors should be evaluated and repaired by a qualified service technician.

CUSTOMER SERVICE: 1-800-423-3872
The ICEE Company, Ontario, CA 91761
For more help, click or go to:
<http://slushpuppie.com/store/maintenance/>