

The dispenser must be cleaned and sanitized at least once a week, or as required by local health regulatory agencies.

1 Drain product from bowls and discard.



2

Fill each bowl with warm water, let sit for a few minutes to allow any remaining product to completely thaw. Drain bowls.



3

Remove and Disassemble the dispenser valve by squeezing the upper release handles together. Pull the valve up and out of the bowl assembly.

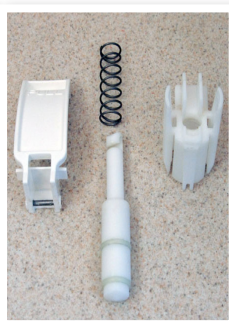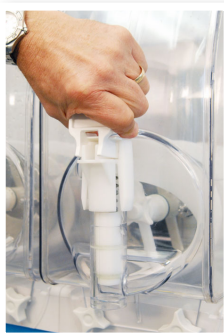


4

Remove the bowl by first removing the bowl retaining knobs. Next, pull the bowl assembly toward you disengaging it from the internal spiral blade assembly.




5

Remove the spiral blade assembly and suction cap gasket by removing the retaining knob.

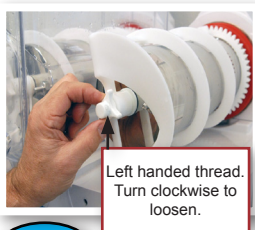

Left handed thread.
Turn clockwise to loosen.

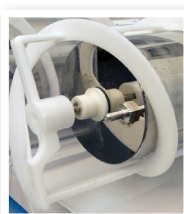

6

Remove the bowl gasket. Note that the inside of the gasket is tapered, as it will be necessary to install it later with the side of the gasket that has a larger diameter opening facing the rear of the machine.



7


Using warm water and a mild detergent, wash the bowls and all other parts removed from the dispenser.

Do NOT use abrasive cleaners or abrasive materials to clean dispenser parts or components.


8

Prior to reassembling, lubricate (using food grade lubricant) the suction cup gasket, the front of the evaporator (where the suction cup gasket contacts the evaporator), and the dispense valve body.

Use food grade lubricant.

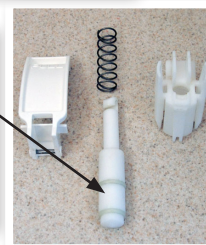

IMPORTANT: Do NOT lubricate the bowl gasket.

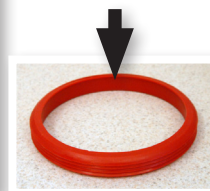

9

Reassemble and re-install all parts that were previously removed / disassembled and washed. **TIP:** Wetting the bowl gasket with water helps seat the bowl with the gasket easier.

10

Using KAY-5 sanitizer or equivalent, prepare sanitizing solution with a minimum 100 ppm strength. Pour sanitizing solution into each bowl, up to the "MAX" line on the bowls, and run the machine for 2 to 3 minutes. Follow all safety procedures listed on sanitizer packaging.



11

Drain the sanitizing solution from the bowls completely and fill the bowls with fresh product.

NOTE: The dispenser must be filled only with freshly mixed product. Product removed from the bowls cannot be reused.

12

Draw and discard about a 1/2 cup of product from each bowl in order to clear any remaining sanitizer from the bowl or dispense valve.



Mixed product must be refrigerated at all times. If the dispenser is off for more than one hour, the product must be discarded and complete cleaning and sanitizing of the dispenser must be performed before resuming normal operation.